



# USER MANUAL

 
Model: DCMC-1000

## Installation

1. Install two CR2032 batteries in the battery compartment.
2. Remove the back paper of the double side tape on the back of the unit.
3. Stick the alarm unit to the window/door frame and then stick the magnet to the window/door.



## Parts and Function

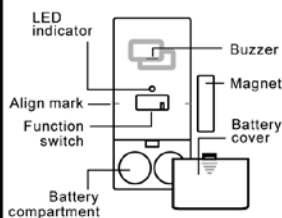


- When the magnet moves away from the alarm unit, the alarm or bell will activate.

### • Alarm mode

 Using as door/window alarm:

The alarm sound will automatically turn off within 15 seconds and sound again 30 seconds later if the door/window does not close.




Slide the switch to siren position

### • Bell mode

 Using as visitor sensor:


The bell will generate a ding dong tone and sound again 30 seconds later if the door does not close.



Slide the switch to bell position

## Connect to the main unit DC-1000 (not included)

1. Ensure the DC-1000 (not included) is on the learning mode.
2. Attach the magnet to the alarm unit or keep the door/window closed.

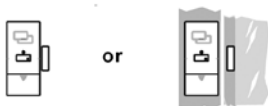

3. Set the function switch either on Bell/Siren position.
4. Send out a wireless signal from the alarm unit by moving it away from the magnet. The DC-1000 will generate a short tone when successfully connected.



**DC-1000**  
(not included)

### Wireless signal:

This device will send out a wireless signal to the DC-1000 before the ding dong tone or siren sound.

### Low Battery:

When the batteries are low, the LED will blink every 5 seconds. The unit continues to operate until the batteries are dead. You must replace the batteries as soon as possible.

# Dakota Alert, Inc.

32556 E Main St • PO Box 130  
Elk Point, SD 57025

PH: 605.356.2772 • FAX: 605.356.3662

[www.dakotaalert.com](http://www.dakotaalert.com)

**Dakota Alert**  
**DCMC-1000**



8 91179 00051 5

Made in China