

## EA-10 • Entry Alert

The battery operated device can be used in both commercial and residential locations. For commercial locations, the device can be placed by the entrance to detect the entry or exit of customers to the store. For residential locations, it can be placed by the door to detect the entry or exit of visitors to the house or room.

### OPERATING INSTRUCTIONS

#### INSTALLING THE BATTERIES

1. This device operates on two "C" sized batteries.
2. Remove the battery compartment cover.
3. Insert the batteries into the battery compartment with correct polarity as indicated.

#### OPERATION

1. Slide the Power Switch to "ON" position.
2. A "Ding~Dong" tone should follow whenever a visitor walks in front of the device.
3. Adjust sound level by using the volume control Hi/Lo switch.


#### LOCATION OF THE DEVICE

1. The device can be placed on a table or mounted onto the wall.
2. The sensor should be placed where it is perpendicular to the walking direction.
3. Lighting conditions: stable and bright light is required. This device is not suitable for places where lighting is dim, flashy or unstable.

#### SPECIFICATIONS

Sound	80dB at "high" volume "Ding~Dong" bell sound
Battery	2 x C sized batteries
Dimension	5.1" x 4.7" x 1.4"

#### PARTS & FUNCTIONS

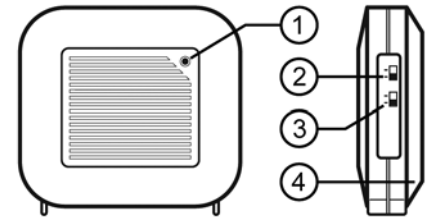

1. Sensor
2. Power On/Off switch
3. Volume control Hi/Lo switch
4. Battery compartment

