



**Dakota Alert, Inc.** [www.dakotaalert.com](http://www.dakotaalert.com)

PO Box 130 • 32556 East Main St. • Elk Point, SD 57025

PH: 605.356.2772 • FAX: 605.356.3662

## AD-PIRW

### **Opening the PIR Sensor to access dipswitches and battery connector:**

1. Slide the PIR Sensor off the bracket (use the bracket as a template for mounting.)
  2. Using a small standard screwdriver, press the release clip on the bottom of the PIR Sensor.
  3. Separate the two parts.
- 
1. Set PIR and AD-01 dipswitches to match. The first five dipswitches on both units need to be set exactly the same with the last 3 dipswitches set to “off”. (Note: On the PIR sensor, “off” is in the down position. On the Dialer, “off” is in the up position.)
  2. Install battery in PIR sensor and mount at desired location. (Note: recommended to replace batteries every 6 months.)