



Dakota Alert®

WIRELESS SECURITY EQUIPMENT

Wireless PIR Sensor

PIR-4000

USER GUIDE

www.dakotaalert.com



INTRODUCTION

The PIR-4000 transmitter is compatible with all Dakota Alert 4000 series receivers. The PIR-4000 is designed for indoor applications. When the sensor detects an object it will send a signal to a receiver which will sound one of the selected tunes for few seconds.

PACKAGE CONTENTS

- PIR
- (1) CR123 A
- Swivel Mount
- Screws (2)
- *User Guide*

 
SETTING UP YOUR PIR-4000:

1. Adjust the PIR-4000
2. Install (1) CR-123 A battery (included)
3. Program the PIR-4000 to your receiver.
4. Mount your PIR-4000.

ADJUSTING MOTION DETECTOR SETTINGS


To adjust your settings, move the jumpers inside the motion detector's case to complete a circuit.

1. To open the case, locate the small tab on the bottom of the case and press with a small flat screwdriver while pulling the lens portion of the case away from the back portion of the case.

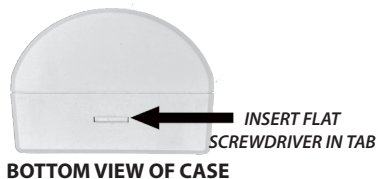


2. Locate the set of jumpers in the bottom left hand corner of the circuit board.

 (Refer to page 4 & 5 for settings)

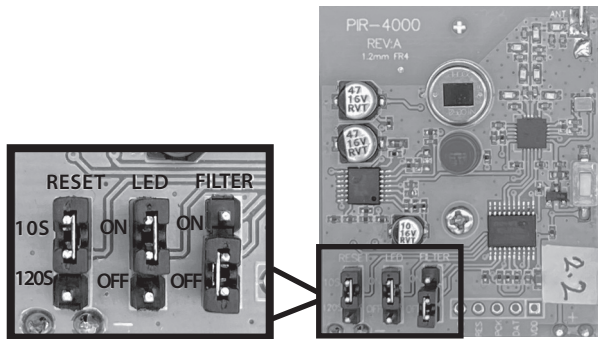

3. Gently pull off the jumper for the setting you want to change.

 
Note: If you can't remove the jumper with your fingers, you can use a tweezer.

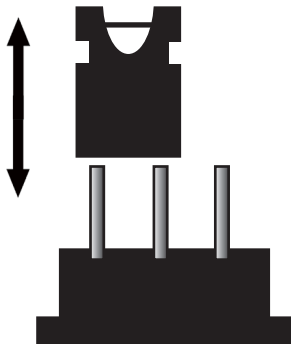


4. Gently push the jumper back onto the pair of jumper pins that corresponds with the setting you want.

JUMPER SETTINGS

 
- **RESET:** Changes the minimum time between alarm activations.

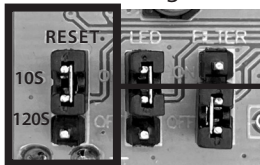

10S  10S (10 Seconds):
Waits 10 seconds
before the alarm
activates again

10S  120S (120 Seconds):
Waits 120 seconds
before the alarm
activates again

 
- **LED:** Turns LEDs on or off

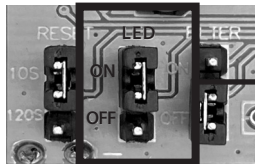

ON  ON:
LED lights for 2
seconds when
motion is detected.

ON  OFF:
Turns off LEDs

 - **FILTER:** Changes the sensitivity level of the motion detector to filter out small movements like curtains moving.

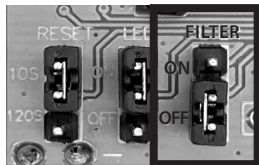


ON  ON:
For less
sensitivity

ON  OFF:
For more
sensitivity

INSTALLING THE BATTERY

 1. Open the case by pressing the small tab at the bottom of the case with a small screwdriver.
2. Install a CR-123A battery in the battery compartment. Be sure to observe the polarity (+/-) on the case.
3. Replace the cover

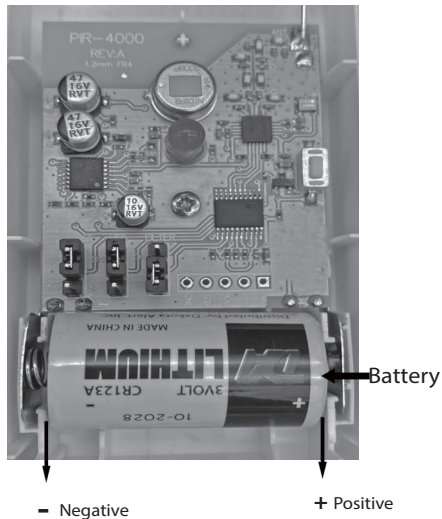

CODING TO YOUR RECEIVER

NOTE: You can connect up to 16 Dakota Alert 4000 Series transmitters to your receiver

1. Refer to the manual for you Dakota Alert 4000 Series receiver for complete coding instructions.
2. To activate the PIR-4000 either wave your hand over the sensor or press the test button

 
 


Test Button

MOUNTING YOUR PIR-4000


NOTE: For maximum wireless range between the motion detector and receiver, avoid mounting the sensor on a metal object. Although the maximum wireless range is about one mile, obstructions such as hills, trees, metal siding and stucco can reduce that range.

1. Select a location to mount the motion detector. For best results mount the sensor on a wall about 7' off the ground and pointing down slightly at the area to be monitored. Avoid pointing towards things that might move such as curtains in the wind.
2. Use a drill and the included screws to mount the swivel bracket.
3. Slide the transmitter down onto the bracket.

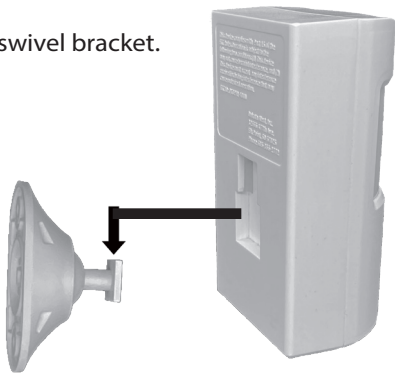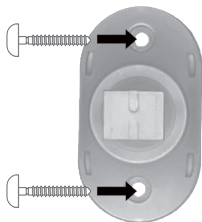

DETECTION PATTERN

 - To **decrease** the detection distance angle the sensor downward.
- To **increase** the detection distance angle the sensor upward.
- Test the detection pattern by walking back and forth in front of the sensor.

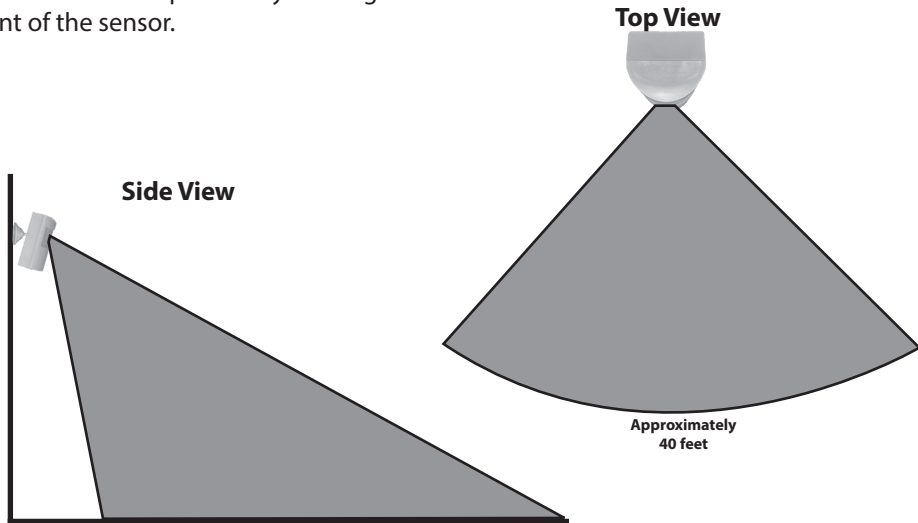

SPECIFICATIONS

- **Power Source:** CR-123A lithium battery
- **Motion detection range:** up to about 40'
- **Wireless Range:** Up to 1 mile (1.6 km)*
- **Dimensions** 3.25" H X 2" W X 1.5" D
- **Operating Temperature:** -10° to 120° F
- **Operating Frequencies:** 433 MHz

***Actual range will vary depending on local terrain and obstructions.**

TECH SUPPORT

If you have problems using this product after reading this manual, please contact us. You can reach us by phone at 605-356-2772 from 8:30 AM to 5:00 PM Monday through Friday (Central Standard Time). We will be happy to answer you questions and help you in any way we can.


WARRANTY

Dakota Alert warrants this product to be free of defects in materials and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, abuse, act of God, or improper operation. If this product does become defective, simply return it to Dakota Alert. Please include a note describing the troubles along with your name, address and phone number as well as the original sales receipt. If the product is covered under warranty it will be repaired or replaced at no charge. **If it is not covered under warranty, you will be notified of any charges before work is done.**

LEGAL NOTICES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **WARNING:** Cancer and Reproductive Harm. Go to www.P65Warnings.ca.gov for more information.

**For additional accessories please visit
www.dakotaalert.com**

Dakota Alert, Inc.

Phone: (605)356-2772

Fax: (605)356-3662

Address: 32556 477th Ave.
PO Box 130
Elk Point, SD 57025



www.dakotaalert.com