



WARNING: This device complies with Part 15 of the FCC rules, Operation of this device is subject to the following conditions: 1. This device may not cause harmful interference. 2. This device must accept any interference, including interference that may cause undesired operation.

PARTS & FUNCTION

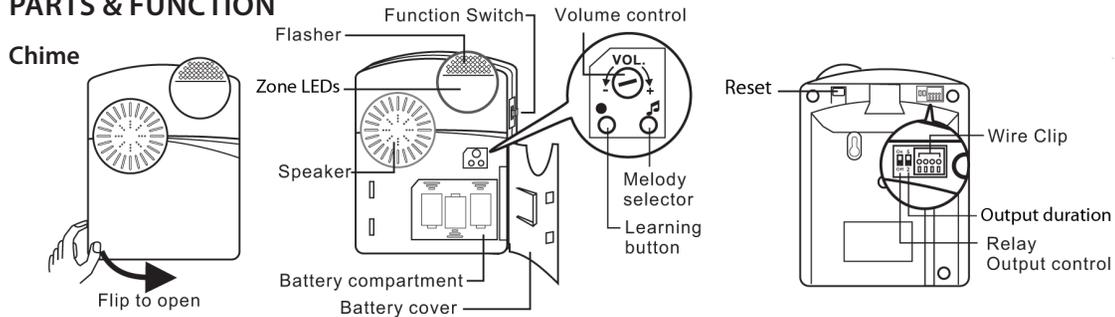


When mailbox door is open, arrow **MUST** be in the red zone.

Mailbox Alert

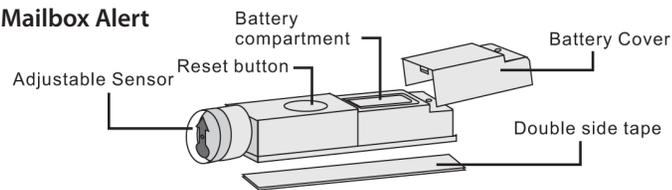


POWER

Chime

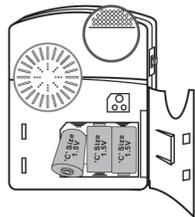


(3) Size 'C' batteries

Mailbox Alert

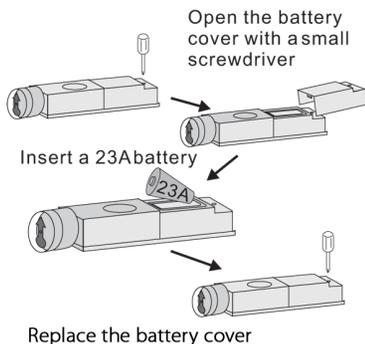

OPTIONAL WIRING & SETTING OF RELAY

NOTE: This section only applies if you are wiring accessories to the door chime.

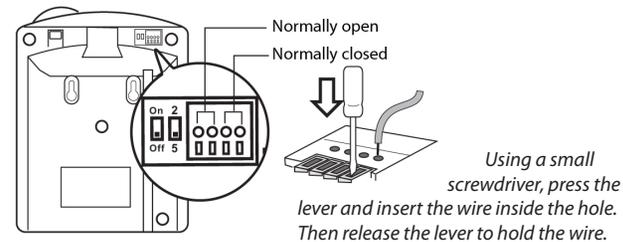

Relay output control

Slide the switch to the 'On' position to activate the relay when zone 4 receives a trigger signal. Slide the switch to the 'Off' position to deactivate the relay.


Output duration switch

Slide the switch to the '2' position for a 2 second activation and the '5' position for a 5 second activation when zone 4 receives a trigger signal.

CODE MATCHING & TONE SELECTION

Entering learning mode

Press and hold the 'Learning' button for 3 seconds. The LED #1 will flash indicating that zone 1 is ready to be programmed. To program zones 2-4, press the 'Learning' button again to cycle through each zone. Then press the 'Melody' button to select one of 18 melodies/tones. Then activate the transmitter to learn the new code.

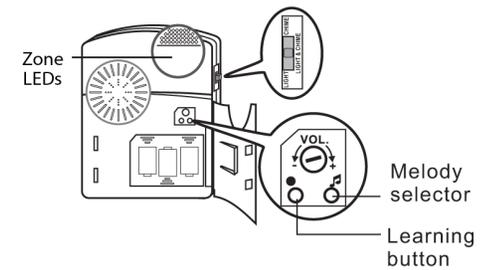

Cancelling the zone indicator

When you open the mailbox press the 'reset' button on the sensor to deactivate the zone indicator on the receiver. You can also press the 'reset' button on the back of the receiver to deactivate the zone indicator. After pressing the 'reset' button on the sensor the sensor will not send another signal for five seconds.

Changing the preset code on the sensor


In the unlikely event that you experience interference issues with multiple sensors you can change the preset code on the transmitter. Remove the battery from the sensor and then re-install the battery while holding down the 'reset' button for five seconds. The LED will flash five times and a new code will be generated. You will then need to go through the code matching process again.

Reset button


Pressing the 'Reset' button will stop the chime and light after the unit has been activated.

MOUNTING

Chime

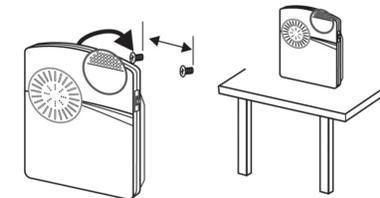

Mailbox alert

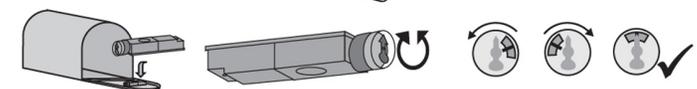

1. Attach the sensor to the door of any top or button hinged mailbox with the double sided tape.
2. Adjust the sensor wheel so that the pointer is in the red area when the mailbox is opened.
3. When the mailbox is opened, a signal will be sent to the receiver and the tune will sound and the corresponding zone indicator will light.



Check out all of the
Dakota Alert, Inc. 1000 Series Products
available now or in the near future:

Chime

This 1000 Series receiver plays a tune to alert you when a transmitter has been activated. There are 4 indicator lights to distinguish which zone has been activated.



Push Button

Simple DIY solution for mounting a doorbell in a home or business.



Magnetic Door/Window Contact

This magnetic contact can be used as a standalone, local alert or by combining it with a receiver. It has bell or siren options depending on your needs and location.



Mailbox Alert

Use with any top or bottom hinged mailbox. Unit will send a signal to the receiver when the mailbox is opened.

Wireless Floor Mat

Place the wireless floor mat under a throw rug or welcome mat and have a signal sent to a receiver any time someone steps on the mat.



Wireless Pull Station

Send a signal to a receiver any time the cord is pulled. Mount near a bed or bath for someone who may need to signal for help.

Wireless Telephone Signaler

The telephone signaler plugs into a standard phone jack and will send a signal to a receiver any time the phone rings. A simple solution for someone with a hearing loss or for use in a noisy environment.



Portable Receiver

Can be used with any 1000 Series transmitters and will provide a chime and visual indicators well as vibrate. A built-in belt clip and small size makes this item very portable and convenient to use.



Motion Detector

Use this infrared motion detector to detect people or vehicles.

Dakota Alert, Inc. 605.356.2772 www.DakotaAlert.com